

## Spark Plug Information

The spark plugs should be removed and examined. A spark plug should be replaced if the electrodes are badly worn, if it has a cracked insulator, or is badly fouled. Before installing the spark plug cover, apply a light coating of *OMC Triple-Guard* grease to the ribbed portion of the spark plug ceramic and to the opening of the spark plug cover. This will help prevent corrosion of the spring terminal on the spark plug which can cause high tension arcing.

### Spark Plug, *Champion*

Model	Recommended	Alternate	Sustained High Speed	Alternate
60, 70	QL77JC4 @ 0.030 in. (0,8 mm)	L77JC4 @ 0.030 in. (0,8 mm)	QL16V @ Fixed Gap	L16V @ Fixed Gap
65 Comm.	QL16V @ Fixed Gap	L16V @ Fixed Gap	QL78V @ Fixed Gap	L78V @ Fixed Gap

PCE0036