



Power cable
Wire diameter

L=L ₁ +L ₂	Wire diameter
~5m	3mm ²
~6m	4mm ²
5~8m	5mm ²
6~11m	6mm ²

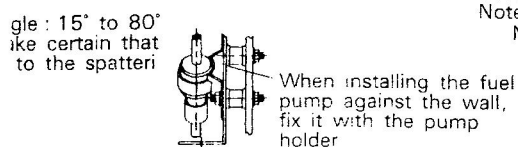

- Notes:
- 1) The pipe installation is to be within the standard except in special applications such as in boats, where the max value may be permitted. However, depending on the operating conditions, adjustments may be needed on the heater, the pipe length and the no. of bends.
 - 2) The combustion air inlet and the exhaust outlet may be affected by air pressure during the vehicle run. Install them where there is little effect from air pressure.
 - 3) For installing the heater body, use the 4-M8×1.25mm or 4-9φ provided on the base to fix it. The pitch is 190mm or 130mm respectively.
 - 4) The branch is to be through a 110mm × 160mm square hole or a 110φ round hole. However, if connecting it to the combustion air intake pipe and/or connecting the fuel pipe to the heater body is difficult, use a square hole.

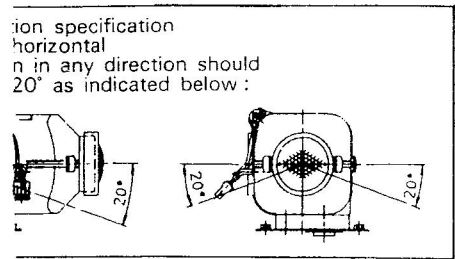

Installation Instruction Model MY30