



<u>Note 1:</u>	The unit can be installed below the sea level; in that case the safety cooling vacuum valve
	has to be fitted on a wall at generator side at least 50 cm above the external sea water line.
	On the hoods are foreseen two additional holes to be employed for the siphon break pipes.