


Servicing Holdfast Self-Tailing Winches 16ST, 30ST, 34ST


MAIN SHEET
HALLIARD (MAST)

1

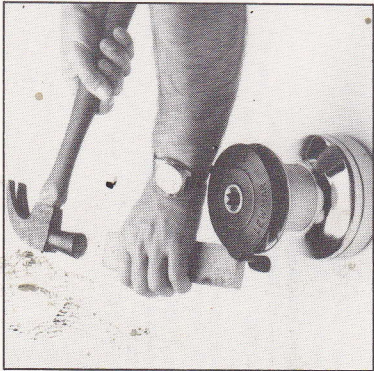


Using a soft faced mallet or wooden block and hammer, loosen the top with a firm tap.

2

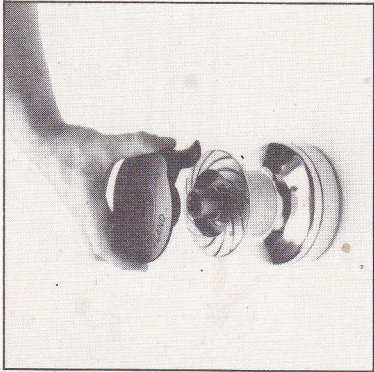


Unscrew top cap.

3

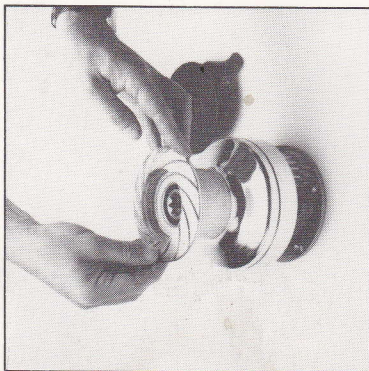


Lift off the drum.

4

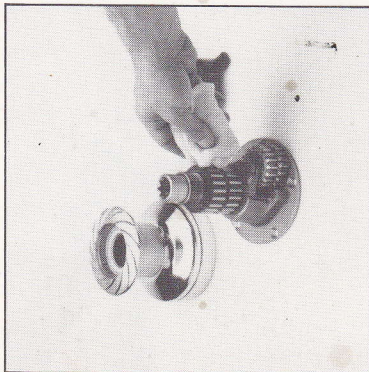

Wash centre stem roller bearings and drum bore with kerosene (paraffin). Dry with a non-fluffy cloth.

5

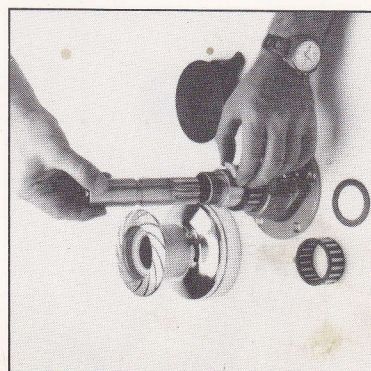

Remove centre spindle key and slide out spindle.


6



Clean spindle, grease lightly and oil pawls.

7


Nos. 30ST, 34ST

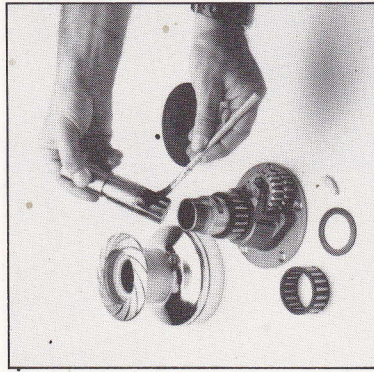

Clean and lightly grease spindle.

8


No. 16ST

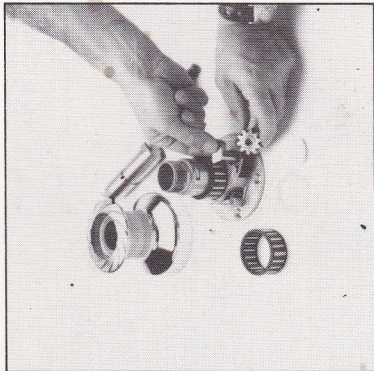

Remove gear, clean and lightly grease.


9

Nos. 30ST, 34ST

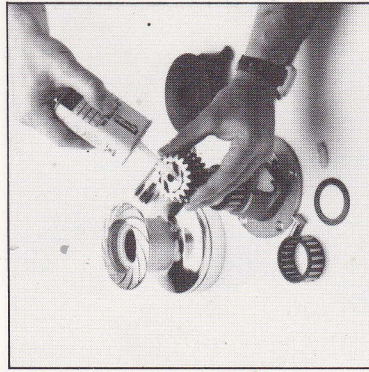

Remove pawl gears and clean. Lightly oil pawls and grease gears.

10

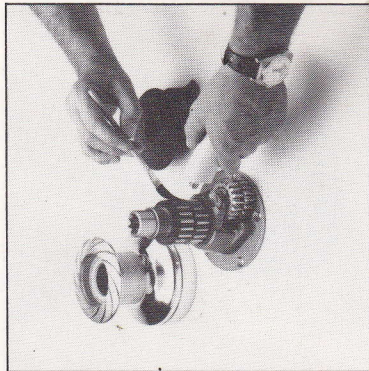

Reassemble spindle and gears. Lightly grease bearing and oil pawls in winch base.

Reassemble winch in reverse sequence to above. Check for correct operation.