





5 Give the final layer a coat or two of epoxy, then cover the surface with peel ply and a layer of plastic and smooth it with the squeegee. Wipe up any squeeze-out.

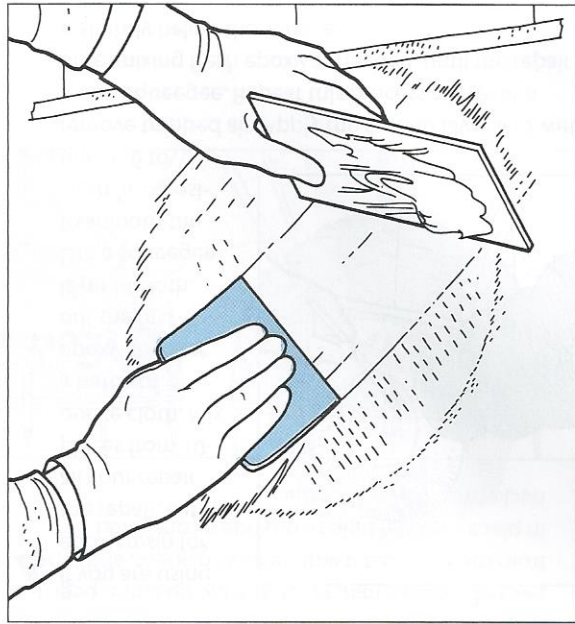

6 Remove the backer from the interior surface and grind the repair and a rectangular area around it. Cut a piece of fiberglass cloth to the size of the ground rectangle and laminate it in place to give the interior of the repair a finished look.

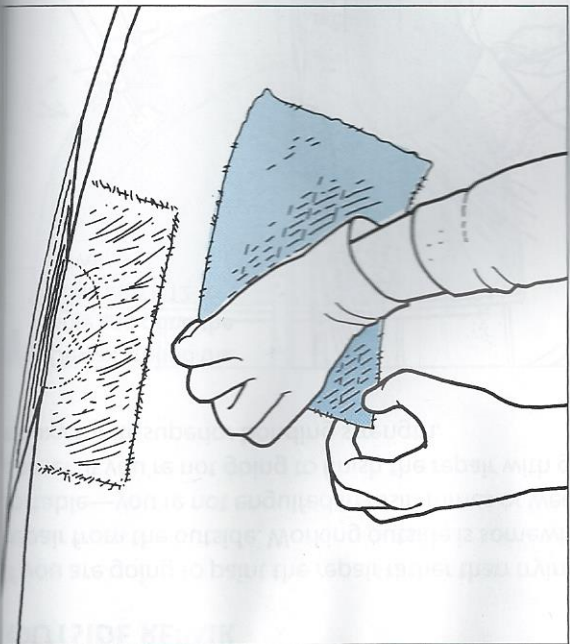

7 Fair the repair with epoxy thickened with micro-balloons (below the waterline, use colloidal silica) and paint.